

# **Line + Mobile Setup Guide**

www.visualint.net



## **Line + Mobile Setup Guide**

### 1/13/2015

## App Store

First search for the **Visualint Line +** App in the App Store.

Click on the download button.

Once the download completes install the App.





#### **App Setup**

When opening the Visualint Line +
App for the first time, the Server
screen appears touch the button
to add a new server

Enter your NVR information into the appropriate fields.


By default the port for IOS / Android is 9786. (This is configured in the Network settings in the NVR Observer Application.)


The User Name / Password is assigned in the Visualint Line Observer Application installed on the NVR.

Touch on back button.

Touch the button to bring up the list of servers.



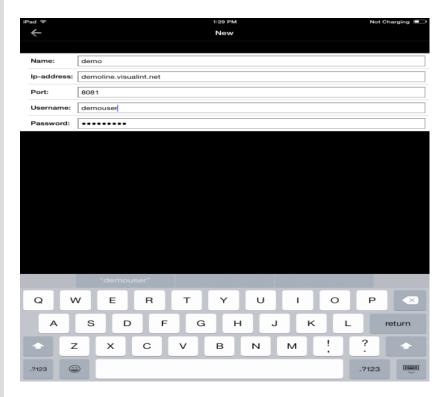

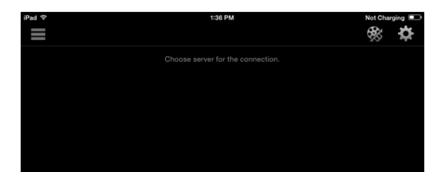

Provided the information entered matches what was entered in the NVR Observer

Touch the online button to start streaming from the NVR Right Arrow to access your server list.

Once authenticated, the button will turn green.

Touch the server list button to minimize the camera list.

Once minimized the video streams will appear as shown.

Touch on the corresponding stream to bring up the individual camera.


If the camera has PTZ functionality, then touch the PTZ control button to toggle PTZ control.




Controls Pan Tilt



Controls the Zoom In / Out

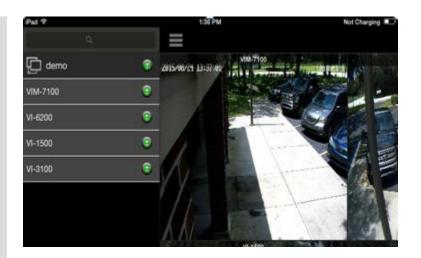




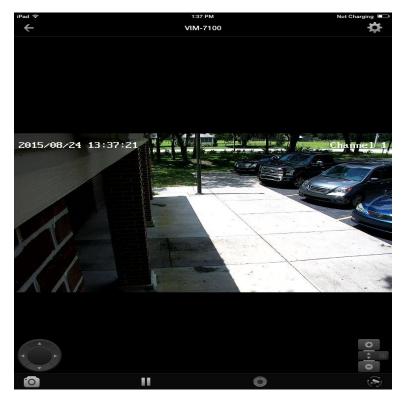

Touch the to take a screen shot

Touch the to pause video feed


To access Video Playback / Archive touch the gear cog icon

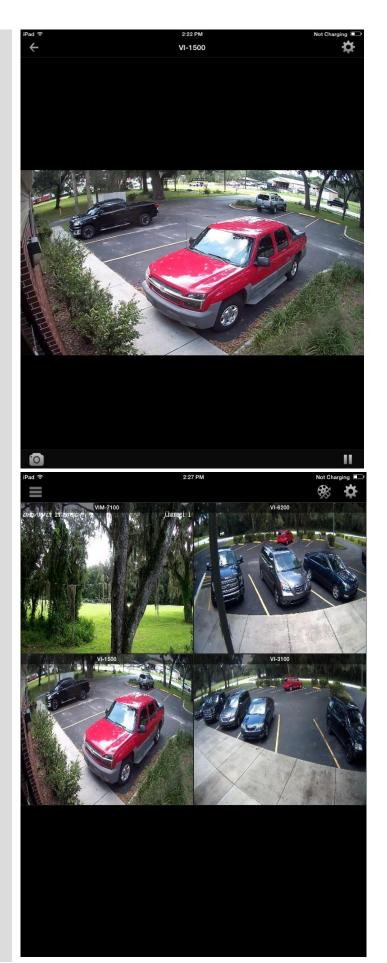

Video playback is displayed in landscape.

- Touch to Reverse playback
- Touch to Pause playback
- Touch to Forward Playback
- Touch to increase / decrease playback speed.
- Touch the to take a screen shot
- Touch to toggle timeline

Touch the Calendar button to display the playback by month / day. Highlighted dates indicate playback / archive is available.

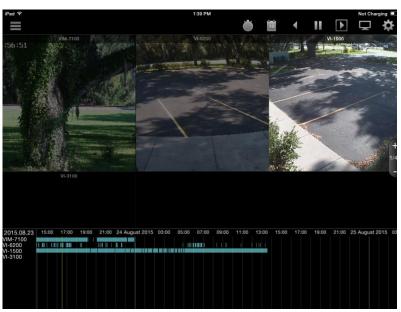



1	Pad ∻			Not Charging 💷					
Ī	(		August		2015		)	hours	min
	Sun	Mon	Tue	Wed	Thu	Fri	Sat	14 15 <b>16</b> 17	55 56 <b>57</b> 58
									59
ı	16	17							
		24							
	30	31							

Touch the gear cog to access the NVR's General Settings.

**Server List** brings up the list of Servers configured on the Line App.

**Client Settings** allows you to configure specific NVR settings: FPS, Aspect Ratio, overlay Settings.

**Application log** in settings allows you to set a password to restrict access to the camera streams on your device.

**Gallery** allows you to browse through the screenshots taken by the Visualint Line + App.

Note: by default screenshots are saved to your Camera Roll.



